OPERATOR'S MANUAL

TELESCOPE SIGHT, RIFLE 4X MANIFICATION

NATO STOCK NO.: 1240-12-197-5192

HENSOLDT WETZLAR

SEPTEMBER 1985

Operating Instructions for Telescope Sight FERO-Z 24

Date: September 1985

		Coptomos Too
	Table of Contents	
1	Description of Unit	Page
1.1	Designation	11
1.2	Purpose	11
1.3	Scope of Supply	11
1.4	Technical Data	13
1.5	Construction	14
2	Operation	15
2.1	Transport	15
2.2	Operating Elements	15
2.3.	Putting Telescope Sight Inlo	
1	and Boresighting	15
3	Maintenance	16

1 Description of Unit

using corresponding holders.

1.1	Designation:	Telescope sight FERO-Z 24
1.1.1	Drwg. No.:	330148-0000.000
1.1.2	NATO Stock No. (set):	1240-12-196-6470
1.1,3	Designation of stock item:	TELESCOPE SIGHT, RIFLE, 4x magnification, with acces sories
1.1.4	Developing firm:	M. HENSOLDT & SHNNE WETZLAR Optische Werke AG
1.1.5	Manufacturing firm:	M. HENSOLDT & SOHNE WETZLAR Optische Werke AG
1.2	Purpose	
	rifleman for targeting and aim	ed for use with the G3 rifle. It serves the ring and enables him to observe the enemy ven at a greater distance. The max.

data the telescope sight can be mounted on any other handfire-arm

adjustable distance is 600 m. After consideration of the various ballistic

1.3 Scope of supply

Scope of supply, drawing and NATO Stock Nos. change according to the design of the telescope sight.

1.3.1 One telescope sight (Fig. 1)

Drwg. No.:

330148-9001.000

NATO Stock No.:

1240-12-197-5192

Designation of stock item:

TELESCOPE SIGHT, RIFLE,

4x magnification

1.3.2 Two protective rubber caps (10)

Drwg. No.:

330148-9002.000

NATO Stock No.:

5340-12-198-3368

Designation of stock item:

PROTECTIVE CAP. TELESCOPE

SIGHT, rubber

1.3.3 One grey filter (6)

Drwg. No.:

330108-9003,000

NATO Stock No.:

1240-12-144-0715

Designation of stock item:

FILTER, LIGHT, TELESCOPE SIGHT

1.3.4 One telescope-sight case with list of contents (20)

Drwg, No.:

330148-9003.000

NATO Stock No.:

1240-12-302-4921

Designation of stock item:

STORAGE CASE, TELESCOPE

SIGHT

1.3.5 One tool bag with contents

Drwg. No.:

335917-0000.000

NATO Stock No.:

1240-12-186-3404

Designation of stock item;

TOOL BAG, with contents

comprising:

1.3.5.1 One tool bag (23)

Drwg. No.:

335917-8010.000

NATO Stock No.:

5140-12-146-5698

Designation of stock item:

TOOL BAG

1,3,5.2 One screw driver (22)

Drwg. No.:

335917-8020.000

NATO Stock No.:

5120-12-121-1092

Designation of stock item:

SCREW DRIVER, LONGITUDI

NAL SLOT 4.5 x 40 mm blade, 100 mm

long

1.3,5.3 One dust brush (21)

Drwg. No.:

TL 7920-0024-22

NATO Stock No.:

7920-12-120-0355

Designation of stock item:

BRUSH, DUST, OBJECTIVE,

squirrel hair, 10 mm dia., goose-quill

holder

1.3.5.4 One optics cleaning doth (24)

Drwg. No.:

TL 6640-003-80 x 115

NATO Stock No.:

6640-12-124-6982

Designation of stock Item:

CLEANING CLOTH, LENS,

cotton 80 x 115 mm

1,3.6 Sight holder (19)

Drwg. No.:

H & K 100236 or 100236/8

NATO Stock No.:

1240-12-140-9932 or

1249-12-160-0373

Manufacturing firm:

Heckler & Koch, Oberndorf

Designation of stock item:

HOLDER, TELESCOPE SIGHT, RIFLE

One copy of operating instructions (on request)

1.4	Technical Data		
1.4.1	Optical Data		
1.4.1.1	Telescope magnification (V)	4x	
1.4.1.2	Entrance pupil diameter (EP)	24 mm	
1.4.1.3	Exit pupil diameter (AP)	6mm	
1.4.1.4	Eye relief	approx. 60 mm	
1.4.1.5	Diopter setting	- 0.5 to - 0.75 dpt (fixed)	
1.4.1.6	Parallax-free for a distance of	150 mm	
1.4.1.7	Field of view angle	6 deg.^ 106.66	
1.4.1.8	Field of view	105 m/1000 m	
1.4.1.9	Retide	sighting thorn with side scale according to FINABLE	
1.4.1.10	Attachable filter	grey (NG 4; 2.6 mm thick, approx. 94% absorption)	

1.4.2.1	Mechanical Data and Dimensions (Fig. 1) Elevation angle adjustment/	
7.7.4	range adjustment	100 to 600 m
	- elevation correction of one click	1 cm/100 m
	- adjustment	approx. 0.1
	* dujusunent	1^100 m ^1. 74
		2^200 m ^2.29
		3^300 m ^3.24
		4^300 m ^4.43
		5^600 m ^5.87
		6^600 m ^7.57
1.4.2.2	Lateral adjustment	
	- lateral correction of one click	1cm/100 m approx, .1
	- total adjustment	+/- 24 clicks
1.4.2.3		elevation > 2
117emow	manufactured for medical series	lateral > 1
		interes > 1

1,774	adjusted to the same point with range setting 1 and lateral setting 0	
	range soming I and lateral details of	tolerance +/- 0.5
1.4.2.5	Total length of telescope sight	
	incl. protective rubber caps	226.5 mm
1.4.2.6	Protective rubber cap	39.5 mm dia.
1.4.2.7	Tube	27 mm dia.
1.4.2.8	Eyepiece/Objective	32.5 mm dia.
1.4.2.9	Distance between optical axis	
	and telescope sight support	20.7 mm
1.4.2.10	Telescope sight support	per STANAG 2324
1.4.2.11	Mounting screws	M6; 10.5 mm long
1.4.2.12	Case (external dimensions)	approx. 230 x 105 x
		63 mm
1.4.2.13	Distance between optical axis and	
	axis of the bore (incl. sight holder)	87.5 mm

All telescope sights have been

1.4.2.4

1.4.3	Weight	
1.4.3.1	Telescope sight	approx. 0.30 kg
1.4.3.2	Telescope sight including sight holder	approx, 0.62 kg
1.4.3.3	Telescope sight including sight holder	
	and accessories in case	approx. 1,00 kg

1.5 Construction

1.5.1 General

The telescope sight is a monocular telescope of straight construction with a lens erecting system. For the elevation angle adjustment the sighting thron is displaced vertically.

1.5.2 Optical Structure (Fig. 2)

The incident light beams penetrate the objective (1) and are imaged into the first focal plane (2), where the reticle with the sighting thorn is locat ed. The reticle pattern can be illuminated via the cylindrical lens (9), if required. By means of the two two-element erecting lenses of the erect ing system (4) the image of the first focal plane is imaged into the eye piece focal plane (7) and viewed through the eyepiece (5). Optionally a grey filter (6) can be mounted before the eyepiece.

1.5.3 Mechanical Structure (Fig. 3)

The objective and eyepiece sides of the tube (11) can both be provided with a protective rubber cap (10). Two mounting screws (13) are provided for mounting the sight on the holder.

- 1.5.3.1 The outer side of the tube accommodates the following components: elevation adjustment (12), lateral adjustment (14), guide bar (25) and telescope sight support (15) per STANAG 2324. Inside the tube the objective (1), the reticle (3), the eyepiece (5), and the erecting system (4) comprising the two two-element erecting lenses are arranged.
- 1.5.3.2 The protective caps (10) at the objective and eyepiece sides serve for protection against mechanical damage and are closed by inverting when the telescope sight is not in use.
- 1.5.3.3 The mounting screws (13) serve for screwing the telescope sight to the sight holder. They are provided with self-securing Nylock inserts.

2 Operation

- 2.1 Transport (Fig. 6)

 For transport and storage the telescope sight together with the sight holder and the accessories is put into the case (20).
- 2.2 Operating Elements
- 2.2.1 The reticle is designed according to Fig. 4. The reticle pattern consists of the sighting them with side scale per FINABEL.
- 2.2.2 The elevation angle is adjusted by means of the elevation adjustment (12).
- 2.2.3 Lateral correction is effected by means of the lateral adjustment (14).
- 2.2.4 The protective rubber caps (10) prevent mechanical damage.
- 2.2.5 The telescope sight is mounted on the sight holder (19) by means of the mounting screws (13) on the telescope sight support (15).
- 2.2.6 The grey filter (6) to be inserted into the eyepiece protective cap serves as anti-dazzle device.

2.3	Putting Telescope Sight Into Operation and Boresighting (Fig. 5)
2.3.1	Mount lelescope sight (18) with sight holder (19) on rifle securely.
2.3.2	Open protective rubber caps (10) at eyepiece and objective sides of tel-
	escope sight by Inverting.

- 1.3.3 In case of too much glare by sun or snow insert grey filter (6) into eye piece cap.
- 2.3.4 Set elevation adjustment (12) to 100 m (click 1) and lateral adjustment (14) to 0.
- 2.3.5 Loosen countersunk screws (16) by means of screw driver (22).
- 2.3.6 Adjust sight on rifle to 100 m and aim at target 100 m away via notch and bead sights.
- 2.3.7 Point sighting thorn of telescope sight at same target. For this purpose operate elevation (12) and lateral (14) adjustments using a coin. Make sure that settings as per 2.3.4 remain unchanged.
- 2.3.8 Fire trial shots and readjust thom after each shot if required. The turning direction for shot correction is indicated on the disks of the elevation and lateral adjustment (12 and 14).
- 2.3.9 After adjustment re-tighten countersunk screws (16).

2.3.10 Depending on target distance between 100 and 600 m set elevation adjustment (12) to clicks 1 to 6 accordingly. At the same time the sighting thom is shifted in height and the elevation angle corresponding to the distance is adjusted.

Maintenance

- 3.1 Check optics for cleanliness. Clean dirty optics only with dust brush (21) arid optics cleaning cloth (24) after breathing on them; do not touch with fingers (dustbrush and optics cleaning cloth are part of accessories). Slight impurities (scratches) on the outer optical surfaces do not impair function of the unit. However, cracked glass components have to be replaced (return unit for repair).
- 3.2 Remove dust and dirt from outer mechanical surfaces with a dry cloth or brush. Remove coarse impurities (such as oil or grease) with a cloth moistened with gasoline. Clean moving parts and fitting surfaces particularly carefully.

- 3.3 Check operating elements for easy motion. Slightly oil moving parts of sight holder using an acid-free oil.
- 3.4 Disinfect protective rubber caps. Moisten clean cloth with a disinfectant solution and wipe rubber parts.
- 3.5 Touch up varnish blemishes using an air-drying varnish per RAIL 90'05 after having degreased the area.

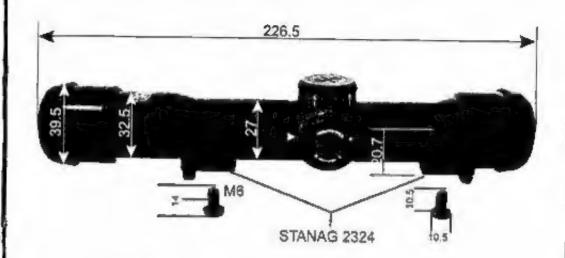


Fig. 1 Main dimensions of the unit

Fig. 2 Optical structure

- objective
- 1. 2. 3. 4. 5. 6. 7. 8. first image plane (reticle plane)
- reticle
- erecting system
- eyepiece
- grey filter
- second image plane
- Illumination
- 9. cylindrical lens

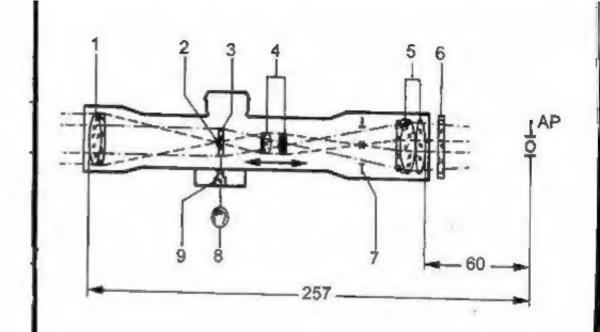


Fig. 3 FERO-Z 24

View from the right

- 10. protective caps
- 11. tube
- 12. elevation adjustment
- 13. M6 mounting screws
- 14. lateral adjustment
- 15. telescope sight support

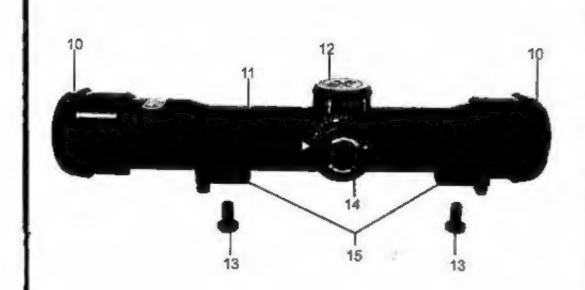


Fig. 4 Reticle pattern

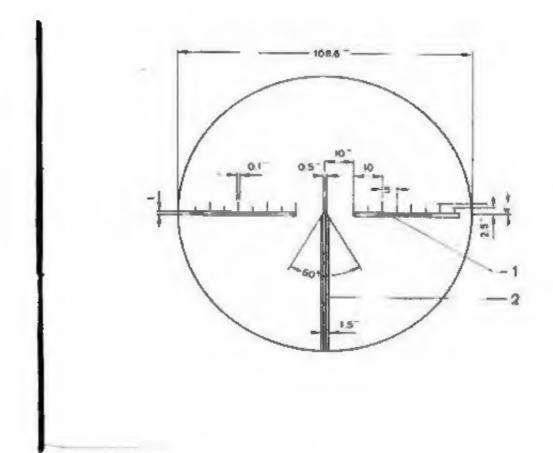


Fig. 5 FERO-Z 24

View from the left

6 grey filter

10 protective caps

11 tube

12 elevation adjustment

14 lateral adjustment

16 countersunk screws

17 elevation adjustment ring

18 telescope sight

19 sight holder

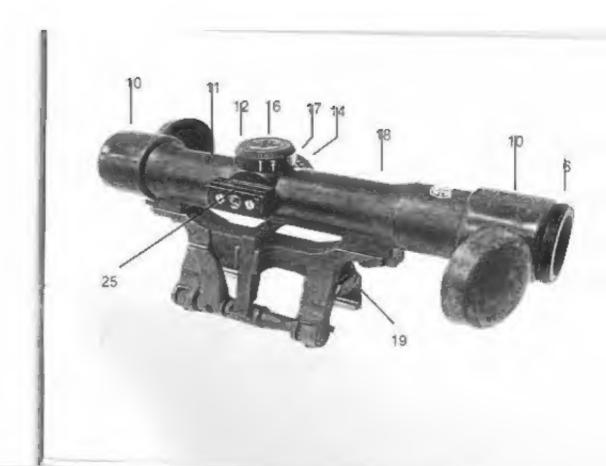


Fig. 6 FERO-Z 24

10 protective caps

18 grey filter

19 sight holder

20 storage case

21 dust brush

22 screw driver

23 tool bag

24 optics cleaning cloth

